

# M12



## Product Parameters

Model: M12

Transmission Distance: 10m

Impedance: 4 Ohm

SPK: 52mm\*1

Play Time: 8H

Standby Time: About 20 months

Net Weight: 295g

Wireless Version: V5.0


Range: 60HZ-18KHZ

Rated power: 5W

Battery Capacity: 1200mAh

Voltage: 5V=1A

Charging: 2.5H

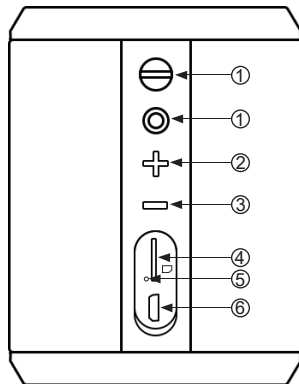

1.Power on/Power off/Press and hold to disconnect

2.Volume up/Next track/TWS pairing indicator

3.Volume up/Next track/TWS pairing indicator

4.TF-Card

5.Working Light/MIC

6.Micro\_usb

## Operation Guide

button	TF Card Mode			
	Long press 3S	Long press 1S	Shore press	Double click
○	Turn on / OFF	Change Mode	Play / Pause	No Function
+	Volume up	Volume up	Next Song	Next Song
-	Volume down	Volume down	Last Song	Last Song
button	BT Mode			
	Long press 3S	Long press 1S	Shore press	Double click
○	Turn on / OFF	Change Mode	Play / Pause/ Connect BT	Disconnect
+	Volume up	Volume up	Next Song	Turn on / off TWS
-	Volume down	Volume down	Last Song	No function

button	Calling Mode			
	Long press 3S	Long press 1S	Shore press	Double click
○	Turn on / OFF	Reject Call	Answer/ reject phone	Disconnect BT
+	Volume up	Volume up	No function	No function
—	Volume down	Volume down	Last Song	No function
button	FM Mode			
	Long press 3S	Long press 1S	Shore press	Double click
○	Turn on / OFF	Change Mode	Play / Mute	automatic search
+	Volume up	Volume up	Next radio	Next radio
—	Volume down	Volume down	Last radio	Last radio

## Pilot lamp

Red light: The red light for charging is always on, and the red light will turn off when it is full.

Blue light: Stop /Bluetooth connection successful-always on; Play-flash slowly;

FM mute-slow flash; fully automatic search / Bluetooth waiting link-fast flash.

## TWS pairing operation guide:

1. Turn on the two speakers and double-click the "+" button of one of them;
2. The "speaker" will be used as the host, actively searching for the speakers with TWS function of the same model around, and the automatic connect;
3. Turn on the phone's Bluetooth, search for the Bluetooth name "Bluetooth name" and click connect.
4. The next time you turn on the two successfully connected "speakers" will automatically connect. If you need to disconnect the TWS function, double-click any one of the "+" button to disconnect.

## Cautions

Store and use this product in normal temperatures;

Do not expose this product to rain or moisture;

Do not drop this product to avoid damages to the product;

Do not disassemble, repair or modify this product by yourself.

The product has built-in lithium battery. Do not throw it anywhere or put it in fire to avoid danger.

## Packing List

1. Speaker 1PC
2. USB Charging cable 1PC
3. Hand Rope
4. User Manual

## FAQ

Problems	Solutions
Cannot be connected and paired successfully	1. Check if the speaker is searching for devices Or restart 2. Too many BT devices around are making searching difficult . Close other devices BT function
Low or distorted sound	1. Check the volume of the BT device and adjust its volume 2. Low battery , Recharge it
Music is played staccato	1. Make sure the speaker sits in the effective wireless Connection range 2. Remove obstacles between the speaker and BT device
BT indicator does not work	1. Low battery, Recharge it 2. Restart.